

## Become a 60 Second *e*<sup>3</sup> SERIES™ Expert

Everything you need to know to build a basic eMerge system in less than a minute.

 
### One-Door System

- A One (1) ES-1MB<sup>1</sup> 1-Door, 1-Mullion Mount Reader Essential Access System Bundle (Part # ES-1MB)
- B One (1) ProxCARD II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCARDII)



### Two-Door System

- A One (1) ES-1MB<sup>1</sup> 1-Door, 1-Mullion Mount Reader Essential Access System Bundle (Part # ES-1MB)
- B One (1) ES-1DLB<sup>1</sup> Single Door License with Reader Bundle (Part # ES-1DLB)
- C One (1) ProxCARD II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCARDII)

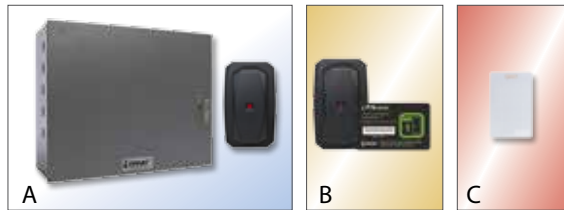

### Three-Door System

- A One (1) ES-1MB<sup>1</sup> 1-Door, 1-Mullion Mount Reader Essential Access System Bundle (Part # ES-1MB)
- B Two (2) ES-1DLB<sup>1</sup> Single Door License with Reader Bundle (Part # ES-1DLB)
- C One (1) ProxCARD II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCARDII)



<sup>1</sup> Includes One (1) 2N1 Reader HAF 125 kHz, HID-Compatible, Proximity Access Card Reader (Part # P-300HA)

[www.nortekcontrol.com/emerge-browser-managed-access-systems.php](http://www.nortekcontrol.com/emerge-browser-managed-access-systems.php)

## Four-Door System

A One (1) ES-4MB<sup>2</sup> 4-Door, 4-Mullion Mount Reader Essential Access System Bundle (Part # ES-4MB)

B One (1) ProxCard II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCardII)

 


## Six-Door System

A One (1) EL36-4MB<sup>2</sup> 4-Door, 4-Reader Elite Access System Bundle (Part # EL36-4MB)

B One (1) ACM2DB<sup>3</sup> 2-Door, 2-Reader ACM with Reader Bundle (Part # ACM2DB); ACM mounts inside either the ES or EL standard metal enclosure

C One (1) ProxCard II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCardII)

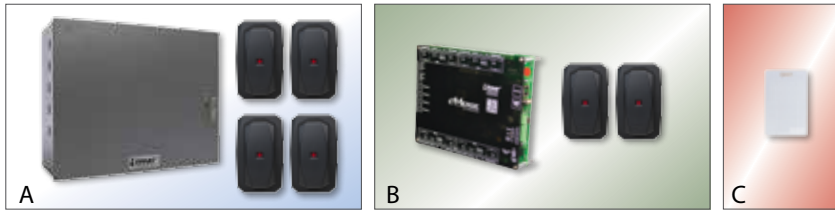


## Eight-Door System

A One (1) EL36-4MB<sup>2</sup> 4-Door, 4-Reader Elite Access System Bundle (Part # EL36-4MB)

B One (1) ACM4DB<sup>2</sup> 4-Door, 4-Reader Access System Bundle (Part # ACM4DB); ACM mounts inside either the ES or EL standard metal enclosure

 C One (1) ProxCard II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCardII)

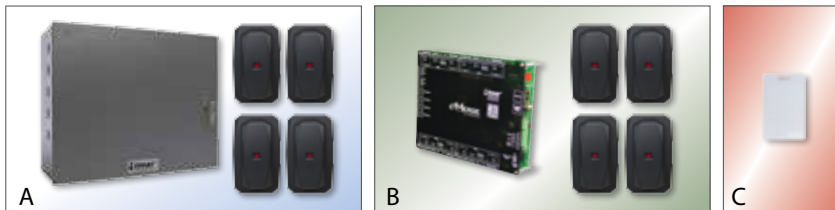

## Ten-Door System

A One (1) EL36-4MB<sup>2</sup> 4-Door, 4-Reader Elite Access System Bundle (Part # EL36-4MB)

B One (1) EXN-2MB<sup>3</sup> 2-Door, 2-Reader Access System Expansion Bundle (Part # EXN-2MB)

C One (1) ACM4DB<sup>2</sup> 4-Door, 4-Reader Access Control Module Bundle (Part # ACM4DB); ACM mounts inside either the ES or EL standard metal enclosure

D One (1) ProxCard II 25-Pack, 125 kHz, Wiegand Proximity Access Cards (Part # ProxCardII)



ES = eMerge Essential

EL = eMerge Elite

<sup>2</sup> Includes Four (4) 2N1 Reader HAF 125 kHz, HID, AWID and Farpointe compatible, Proximity Access Card Reader (2N1ProxHAF – Item #620-100451)

<sup>3</sup> Includes Two (2) 2N1 Reader HAF 125 kHz, HID, AWID and Farpointe compatible, Proximity Access Card Reader (2N1ProxHAF – Item #620-100451)

To try an E3-Series eMerge system, go to: [www.nortekcontrol.com/try-emerge-essential.php](http://www.nortekcontrol.com/try-emerge-essential.php)

For License-to-Go™ upgrades, go to: [www.e3upgrade.com](http://www.e3upgrade.com)